

Alarms	Analog Parameters
Engine Running	Battery Voltage
Common Alarm Active	Diesel Fuel Level ³
Remote Start Inactive	ATS Load kW ²
High Coolant Temp Alarm	ATS Load kWh ²
Low Coolant Temp Alarm	ATS Load kVAR ²
Low Oil Pressure	ATS Load kVA ²
Not In Auto	ATS Load Power Factor ²
High Temp Shutdown	ATS Load Average kW ²
Low Oil Pressure Shutdown	ATS Load Minimum kW ²
Overcrank	ATS Load Maximum kW ²
Overspeed Shutdown	ATS Load Voltage Line – Line ²
Emergency Stop	ATS Load Voltage Line – Neutral ²
ATS Position ¹	ATS Load Average Amps ²

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹ATS Position Alarm requires an ATS with available position contacts if information not available through existing Controls. Customer to provide materials and labor to install wiring between OMN Monitor and ATS. Please note ATS Position monitoring request at time of order.

²ATS Load Analog Parameters require optional Power Meter Kit (Modbus) installed on load side of ATS if information not available through existing Controls. Customer to provide materials and labor to install wiring between OMN Monitor and Power Meter Kit. See OMN Power Meter Kit Spec Sheet for more details. Please note that Power Meter Kit can be installed in other locations other than load side of ATS.

³Fuel Level Analog Parameter requires optional Fuel Level Kit (Analog) if information not available through existing Controls. Customer to provide material and labor to install wiring between monitor and Fuel Level Kit. Please note depth of tank to ensure correct gauge is ordered. See OMN Fuel Level Kit Spec Sheet for more details.