

Alarms	Analog Parameters
Generator Running	Battery Voltage
Generator Excessive Running ¹	Engine Hours ¹
Fail to Exercise ¹	
Battery Voltage High ²	
Battery Voltage Low ²	
Common Alarm	
Coolant Temp High	
Coolant Temp Low	
Not in Auto	
Oil Pressure Low*	
Overspeed*	
Overcrank*	
On Generator Power ³	
Data Connection Lost	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired & activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹Generator Excessive Running, Fail to Exercise, and Engine Hours are available when configured through OmniView. It is suggested to do this at time of monitor setup.

²Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings in OmniView.

³On Generator Power Alarm requires optional Current Relay Kit installed on output side of Generator Circuit Breaker. Current Relay Kit to ship loose for customer installation. Customer to provide materials and labor to install wiring between OMN Monitor and Current Relay Kit. See OMN Current Relay Kit Spec Sheet & Install Guide for more details. Please note that Current Relay Kit can be installed in locations other than load side of generator.

*Oil Pressure Low, Overspeed, and Overcrank are only available on the Generac E Panel with Relay Kit.