

Alarms	Analog Parameters
Generator Running	Battery Voltage
High Battery Voltage	Engine Hours
Low Battery Voltage	Diesel Fuel Level <sup>3</sup>
On Generator Power <sup>2</sup>	
ATS Position <sup>1</sup>	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired by customer)	
Control Relay Output 2: Available	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

<sup>1</sup>ATS Position Alarm requires an ATS with available position contacts if information not available through existing Controls. Customer to provide materials and labor to install wiring between OMN Monitor and ATS. Please note ATS Position monitoring request at time of order.

<sup>2</sup>On Generator Power Alarm requires optional Current Relay Kit installed on output side of Generator Circuit Breaker. Customer to provide materials and labor to install wiring between OMN Monitor and Current Relay Kit. See OMN Current Relay Kit Spec Sheet for more details. Please note that Current Relay Kit can be installed in other locations other than load side of Generator.

<sup>3</sup>Fuel Level Analog Parameter requires optional Fuel Level Kit (Analog) if information not available through existing Controls. Customer to provide material and labor to install wiring between monitor and Fuel Level Kit. Please note depth of tank to ensure correct gauge is ordered. See OMN Fuel Level Kit Spec Sheet for more details.