

OMNIMETRIX

GLOBAL MONITORING + CONTROL

TO ACTIVATE YOUR OMNIMETRIX MONITOR, FOLLOW THESE STEPS:

Save time on your install with the Unit Activation page! This feature allows you to activate your new monitor without having to contact our Tech Support Team. Follow this step-by-step guide to activate your OmniMetrix monitor. This page will also save you time by pushing the details about your new remote monitor to the edit monitor page, thus eliminating the need to type in the same information in multiple places.



- Leave monitor powered off
- In OmniView, click "Configuration > Unit Activation"
- In the "Target Unit ID" drop down box, select the Unit ID you want to activate
- Select the "Source Unit" that matches the generator brand & control panel you are connecting to
- Click the "Copy Config" button once completed
- Click "Show on Dashboard" & enter the remaining information. This will transfer to the edit monitor page
- Click the "Update Monitor" button
- Power the device on to receive updated software (click "Refresh" box under Raw Data section for status updates)
- Once update is complete, click "Activate" (billing will begin upon clicking "Activate")
- If the device was already powered on, send a "Get Data" command or scan the QR code for additional instructions

**SCAN THE QR CODE
FOR A VIDEO
WALK-THROUGH**



If you have any issues, don't see any data or the data feed has a bunch of red/different colors, please contact Tech Support: 770-209-0012, Option 2.