



1. Unpack Components

- Unpack the monitor, antenna, and data and power cable.
- Inspect all components to ensure there is no shipping damage.

2. Installing Antenna

- Place the antenna vertically at the center of the roof of the generator.
- Route the antenna cable into the area of the generator control.
- Ensure a drip loop lower than the monitor to prevent water from running down the antenna cable into the monitor connection.

3. Attach the Antenna Cable:

- Attach the antenna cable to the front of the monitor and tighten thumb tight.

4. Attaching the Monitor.

- Attach the monitor via its magnetic feet, on top of the engine controller or another appropriate location.
- Horizontal surfaces are best, but the unit may be mounted vertically or even upside down if necessary.

***Note: If mounted vertically, install the monitor with the cables down to prevent water from entering the enclosure.**

5. Connect the Monitor:

- The monitor can connect to the XE-70 controller via a 2-wire (RS485) Modbus connection.

6. Utilize Modbus Capabilities:

- Connect the OMN white (Data+) and green (Data-) wires to X04 Connector
- Set up controller communications port to Baud Rate 9600, parity none, Slave ID 1.

7. Power On and Check LEDs:

- Turn on the monitor and confirm that the LEDs light up and blink.
- AC to DC Converter might be needed to power up monitor.
- If not, check for power wires at the battery.


8. Confirm Installation:

- Allow 15 minutes for the monitor to log into the network. Call OmniMetrix at 770-209-0012 to confirm installation.



XE-70 Wiring Diagram		
Omni Wire	Function	Termination
Red	Power In (9-30 Vdc)*	Battery +
Black	Ground	Battery -
White	Data +	X04 L1+
Green	Data -	X04 L2-

* An AC to DC converter might be needed to power up monitor.

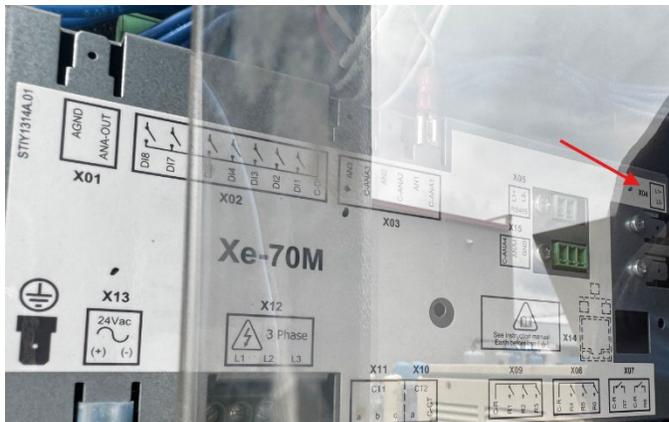

If you have any questions, please call OmniMetrix Tech Support at
770-209-0012 or email at techsupport@omnimetrix.net

