

OMNIMETRIX

GLOBAL MONITORING + CONTROL

OMNIVIEW PERMISSION SETS

	Company Admin	Company User	Config	Command	Config User	Logon Only
Dashboard						
All Unit Visible	✓	✓				
Select Unit Visibility			✓	✓	✓	✓
Configuration						
Accumulation Items	✓					
Command Buttons	✓		✓			
Company Info	✓					
Display Items	✓					
First Page Parameters	✓					
Footnotes	✓					
Global Display Items	✓					
Installations	✓		✓			
Login Provisioning	✓					
Mirrored Units	✓					
Unit Activation	✓					
Users	✓				✓	
Alert Edits	✓		✓			
Analogs	✓					
Calculated Parameters	✓					
Edit Monitor	✓		✓			
Machine Recipients	✓					
Maintenance History	✓		✓		✓	
Parameters	✓		✓			
Pre Installation	✓		✓			
Command						
Command Groups				✓		
Mass Commands				✓		
**PG Exercise Scheduler	Must have all user configurations check for availability					
Queued Commands	✓			✓		
Send Commands	✓			✓		
Send Parameters	✓					
Service Mode Toggle	✓			✓		
*Command Buttons				✓		
Download/Upload						
Parameters History	✓		✓			
Alarms	✓		✓			
Analog Parameters	✓		✓			
Commands	✓		✓			
Parameters	✓		✓			

OMNIVIEW PERMISSION SETS (CONT)

	Company Admin	Company User	Config	Command	Config User	Logon Only
Views						
Company Reports	✓					
Maintenance History Tracker	✓	✓	✓	✓	✓	✓
Renewal Dates	✓					
Run Report	✓					
Trouble Tickets	✓	✓	✓	✓	✓	✓
Unit Listing	✓					
User Log	✓		✓		✓	
Alarm History	✓	✓	✓	✓	✓	✓
Alarms	✓	✓	✓	✓	✓	✓
Analog Parameters	✓	✓	✓	✓	✓	✓
Analog Parameters History	✓	✓	✓	✓	✓	✓
Custom History	✓	✓	✓	✓	✓	✓
Instrumentation Panel	✓	✓	✓	✓	✓	✓
Maintenance History Audit	✓	✓	✓	✓	✓	✓
Parameter Graphs	✓	✓	✓	✓	✓	✓
Raw Data	✓			✓	✓	✓
Scan Masks	✓		✓			
Scope View	✓	✓	✓	✓	✓	✓
GPS						
GPS Tracking	✓	✓	✓	✓	✓	✓
Map All Units	✓	✓	✓	✓	✓	✓
GPS History	✓	✓	✓	✓	✓	✓
Map Unit	✓	✓	✓	✓	✓	✓
Customer Support						
Customer Support Form	✓	✓	✓	✓	✓	✓
OMV2.0 Feedback	✓	✓	✓	✓	✓	✓
Video Tutorials	✓	✓	✓	✓	✓	✓

No Shade = Unit Not Selected
Shade = Unit Selected
* = Not a menu option (Available upon clicking Unit)
** = Must have all user configuration rights