

Alarms	Analog Parameters
Generator Running	Battery Voltage
Common Alarm	Engine Hours ¹
Engine High Temperature	
Low Oil Pressure	
Battery Voltage High ²	
Battery Voltage Low ²	
Fail To Exercise	
Generator Excessive Running	
Data Connection Lost	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired and activated by customer)	

All Alarms & Analog Parameters noted above are only available if so, configured with Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

1. Generator Engine Hours are available when configured through OmniView. It is suggested to do this at the time of setting up.

2. Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings in OmniView.